

You should have

- Tote
- Cassette (contains the liner)
- Corrugated cap
- Poly shroud
- Quick connect (Part No. VFQCF01 or VFQCFGF01)
- Polyester Strapping 5/8" wide & 25 mm thick
- Properly sized Pallet




Here's what to do

- 1 Place tote on pallet. The tote will have a natural 'memory' from being folded.
- 2 To expand, place one end of the folded tote on a corner of the pallet. Lift up the opposite end and ease open the tote, aligning its corners with the pallet.
- 3 The dispense hole at the bottom of the tote should be centered between the runners of the pallet.
- 4 Open cassette, without unfolding the liner, remove fill fitment cap and thread on quick connect fitment.
- 5 Attach your hose to the quick connect fitment.
- 6 Insert cassette in tote, aligning dispense fitment with the hole in tote. Ensure tote is square on pallet with no overhanging sides.
- 7 Turn on valve to start product flow.



continues on next page

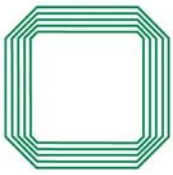

8

8 As the liner fills, steadily raise the hose, backing it out of the tote.

9 The liner is filled when the product is touching the top enclosures, or when the desired weight has been reached. Turn off product and disconnect hose.

10 Encourage any excess air to escape, and thread on the liner's fitment cap.

11 Place poly shroud over the tote, and extend down to the pallet.

12 Fold corrugated cap on pre-scored folds, form and fit over tote.

13 To secure for shipping, strap tote 4 times; twice in both directions.



12



13



Helpful hints

Do not handle the bag liner during filling.

The liner has been packaged in the cassette so that it will open in place without intervention as product flows into it.

When strapping, use a broomstick with a slit in the end to feed strap through pallet.